



BAMP-601

ALTAVOZ MULTIMEDIA-USB-SD-RADIO FM-KARAOKE


Manual de Instrucciones

NOTA: Para que su BAMP-601 funcione correctamente, por favor, lea atentamente este manual antes de usarlo.

FUNCIONES PRINCIPALES

1. Altavoz multimedia de alta fidelidad
2. Pantalla de 1,5": Menú, lyrics, nombre de canción, etc.
3. Soporta USB stick y tarjetas SD.
4. Radio FM
5. Antena de radio incorporada
6. Función grabación
7. Entrada de línea para dispositivos externos (Mp3, Mp4, etc.)
8. Entrada de auriculares
9. Reloj con calendario
10. Función carpetas
11. Batería recargable de litio (BL-5C) de larga duración.

CONTROLES

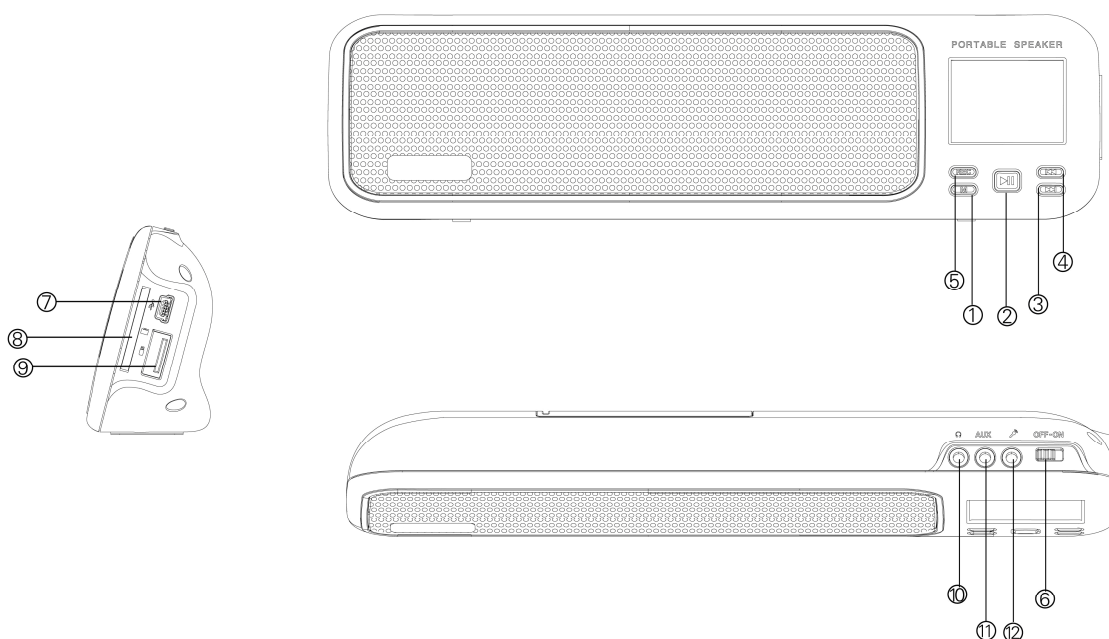

1. Menú	2. Play/Pausa
3. Pista siguiente (+VOL)	4. Pista anterior (-VOL)
5. Botón grabación	6. Botón ON/OFF
7. Entrada USB para carga	8. Entrada tarjeta SD
9. Entrada USB	10. Salida auriculares
11. Entrada AUDIO	12. Entrada micrófono-karaoke

REPRODUCCIÓN DE MÚSICA

1. Pulse el botón de encendido "ON", la pantalla LCD indicará la hora.
2. Pulsando el botón menú "M" la pantalla LCD mostrara el menú principal: "Calendario", "Música", "Grabación", "FM Radio", "Configuración del sistema"

3. Inserte una tarjeta SD o dispositivo USB con música. Seleccione la opción "Música" con el botón "M". Si inserta la tarjeta SD o dispositivo USB comenzará a reproducirse.
4. Modo de reproducción: pulse brevemente siguiente o anterior para seleccionar las canciones.
5. Mantenga pulsado Anterior/Siguiente para ajustar el volumen.
6. Pulse PLAY / PAUSE para reproducir o pausar. Si realiza una pulsación larga pasará a modo apagado
7. Pulse el botón de encendido a "OFF" para cortar el suministro de energía.

RADIO FM

1. Mantenga pulsado el botón "MENU" para entrar en la interfaz principal.
 2. Seleccione la opción "Modo FM" y pulse el botón de menú para entrar en la radio FM
 3. Pulse el botón siguiente o anterior para cambiar la frecuencia manualmente.
 4. Haga una pulsación corta "MENU" para entrar en el submenú, presione el botón de menú para confirmar cada elemento:
Búsqueda automática de estaciones FM.
Guardar: Guarde los canales de FM.
Eliminar: Eliminar un canal de FM almacenado.
Borrar todo: Borra todos los canales de FM que ha almacenado.
Banda
Salir: Salir de este submenú.
 5. Pulse PLAY / PAUSE para cambiar los canales de FM que ha almacenado en la memoria.
- NOTA: Si conecta un cable en la entrada de salida de audio mejorará la señal de radio.

CALENDARIO

Encienda el altavoz, sin insertar ninguna tarjeta o USB, haga clic en M para entrar en el menú de funciones. Haga clic en botón M una vez seleccione "Calendario". Puede ajustar el día de la semana. Para ajustar la hora debe entrar en el menú de ajustes y seleccionar "hora del sistema"

GRABACIÓN

1. Inserte una tarjeta SD o USB, pulse el botón "REC" para entrar en estado de grabación (se necesita espacio suficiente mínimo en la tarjeta). O puede entrar en el menú y seleccionar la función de grabación. Se iniciará la grabación. Puede pausarla con el botón PLAY/PAUSE. Mantenga pulsado "M" y saldrá la grabación, guardando previamente el archivo.

2. Para escuchar la grabación seleccione el modo música en el menú principal, presione "M" y seleccione "VOICE" para escuchar las grabaciones.

KARAOKE

En el modo de reproducción de música, conecte un micrófono en la entrada de micrófono. Pulse el botón "M" y elija "Karaoke". A continuación, pulse "M" de nuevo para entrar en el submenú para elegir y configurar. Tiene 8 opciones de karaoke: "Cambiar modo", "Mic Volum", "Acompañar Volum", "Master Volum", "Fuera de Karaoke", "Ajuste de la letra Time", "Sound Set" y "Exit".

LÍNEA DE ENTRADA

1. Conecte un dispositivo externo por cable jack 3,5 a 3,5 mm. Los archivos de audio almacenados se reproducirán en el altavoz automáticamente.
2. Mientras use la función de entrada de audio, el resto de opciones quedarán inactivas. Deberá controlar otras funciones desde esos dispositivos externos.

OTRAS FUNCIONES

1. EQ: En el modo de reproducción, pulse brevemente "MENU", seleccione "setting EQ" y mediante una pulsación corta de "M" confirme la opción deseada. Dispone de 7 tipos de EQ: Natural, Rock, Pop, Clásica, Suave, Jazz, DBB.
2. El modo de reproducción, presione brevemente "M" y seleccione modo de reproducción confirmando de nuevo con "M". Elija el modo de repetición deseado y pulse brevemente el botón "M" para confirmar. Dispone de 7 tipos: Normal, Repetir uno, Carpeta, Repetir carpeta, Repetir todo, Aleatorio, Intro.
3. Visualización de una carpeta: En el modo de reproducción, presione "Play / pause" para detener la reproducción. A continuación, pulse brevemente "MENU", cambie "U-disco DIR" o "SD DIR" para mostrar las carpetas almacenadas en el dispositivo USB o tarjeta SD. A continuación, seleccione la canción y confirme con una pulsación corta "M".
4. Idioma: En el modo de reproducción, mantenga pulsado "Menú" para volver al menú principal, seleccione "Configuración" y pulse MENU para confirmar. A continuación, seleccione "Idioma" y pulse brevemente "MENU" para entrar en el submenú.

OBSERVACIONES

1. En el modo música tiene prioridad la función SD/USB sobre la entrada de línea.
2. En cualquier submenú, mantenga pulsado "MENÚ" para volver a la interfaz principal.
3. Mientras se utiliza la función de entrada de audio, todas las

operaciones no son válidas, excepto el ajuste de volumen. Otras operaciones tienen que hacerse en los dispositivos externos, tales como "Mp3/Mp4/PC".

CARGA DE LA BATERÍA

1. Conectar a un PC u otro dispositivo mediante un cable USB para la carga.
2. El tiempo normal de carga: 3-8 horas. (La primera vez debe estar completamente cargada por 8 horas pero no exceder de 8 horas con normalidad).

Las especificaciones pueden variar sin previo aviso

Importado por:
I.R.P., S.L.
Avda. Santa Clara de Cuba 5
Sevilla, Spain.



DECLARACIÓN DE CONFORMIDAD

I.R.P., S.L. declara bajo su responsabilidad que el aparato indicado cumple los requisitos de las siguientes directivas:

DIRECTIVAS EMC

EN55013:2001+A1:2003+A2:2006
EN61000-3-2:2006+A1:2009+A2:2009
EN61000-3-3:2008
EN55020:2007

Descripción del aparato:

Modelo BRIGMTON **BAMP-601**
Radio con altavoz incorporado

Importador: I.R.P., S.L.
Dirección: Avda. Santa Clara de Cuba 5, 41007, Sevilla.



BAMP-601

MULTIMEDIA SPEKAER-USB-SD-RADIO FM-KARAOKE


Instruction Manual

For correctly operating, please read this manual carefully before using. Any content revise of the manual won't inform again. And we are no responsible for consequence caused by fault or oversight of this manual.

Main feature:

1. 1.5 inch large screen, can display the menu, the name of song, lyrics, and other parameters information.
2. Support USB Disk & SD card to play MP3/WMA music.
3. Support Multi-language and also can make customized language.
4. FM radio function, build-in antenna.
5. Recording function by one key playing.
6. Line-in function, support external audio player (MP3/MP4/PC etc), and with earphone jack.
7. Alarm clock, calendar function, Memorizing last song automatically
8. Support submenu unfolding function.
9. Support Karaoke speaker system.
10. Built-in High capacity rechargeable Lithium battery.

Instruction for appearance and key:

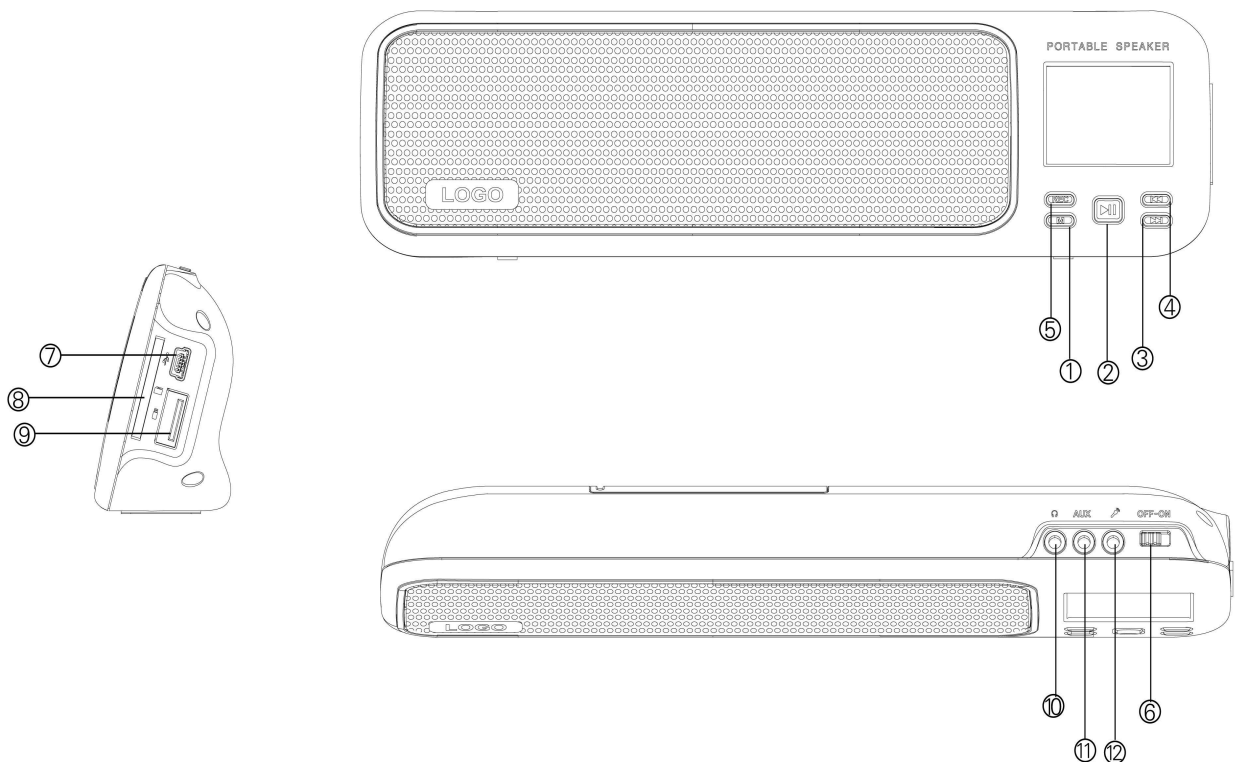

- | | |
|------------------------|-----------------------------|
| 1. Menu | 2. Play/Pause |
| 3. Next song | 4. Last song |
| 5. Recording button | 6. Power button On/off |
| 7. USB slot for charge | 8. SD card slot |
| 9. USB card slot | 10. Headphone output socket |
| 11. Audio input slot | 12. Karaoke slot |

How to play music:

1. Turn the power button to "ON", the LCD screen display indicate the time .
2. The LCD screen display main interface: "Calendar" "Music", "Recording", "FM Radio" "System Setting"
3. Choose "Music" model and press "menu" to confirm. Insert SD /USB Card, audio files begin to play automatically.
4. In playing state, short press LAST or NEXT to select songs you like in sequence.
5. Long Press LAST or NEXT to adjust the volume up or down.
6. Press PLAY/PAUSE to play or pause. Long press will be out of work.
7. Turn the Power button to "OFF" to cut off power supply.

How to use FM radio:

1. Long press "MENU" button to enter into main interface;
2. Choose "FM MODE" and press menu button to enter into FM radio interface, and if put the line cable the signal will be better.
3. Press LAST or NEXT button to change the frequency manually.
4. Short press "MENU" button to enter into submenu as below, press menu button to confirm each item:
 - Auto search: This speaker automatically search and store the FM station.
 - Save : Store the existed FM channels you have choosed
 - Delete : Delete one FM channel you have stored
 - Delete all: Delete all the FM channels you have stored
 - Normal Band: universal radio band standard
 - Japan Band: Japan radio band standard
 - Exit: exit this submenu.
5. Press PLAY/PAUSE button to switch the FM channels you have stored in sequence.

How to use Calendar:

Turn on the power, without inserting the sd/usb Card condition, click M key to enter the function menu. Click M key again, enter the calendar display. Displays contend includes: Solar-bases, Lunar-based, week,time Press "Next" and "Last" up /down to search for another date. If you need to adjust the time and date, you need to click M key into system setting to set the system time.

How to use Recording:

- 1.Put SD/USB card into card slot ,press "REC"button to enter recording status(required inserting enough space card in advance).Or click M key to enter the function menu ,choose "Recording" model then press "M" button to confirm .To be initialized and then began recording, press "Play/Pause" button to stop

recording ,long press M key or short press "REC" to store the contend automatically, the content stored in the sd/usb card.

2. Press M key for a long time to exit, click M key to enter the function menu,selcting the Music Model, click M key again into the playback interface, click M key again, choose the card directory, click M key to enter the subbirectory,select the VOICE folder, click M key to open and select the file you want to play, press M key to play.

How to use karaoke system:

In the music playing mode. Put the mike in to karaoke slot. Press "M" button to chose "Koraoke" to enter. Then press "M" again to enter submenu to chose and set. Eight Option:"Change Mode","Mic Volumn","Accompany Volumn","Master Volumn","Out of Karaoke","Adjust the Time lyric","Set Sound" and "Exit".

How to use Clock function and time display

1. In playing model, long press "MENUE" to return to main menu, choose "setting" and press "Menu" to confirm going to the "system time"
2. In "setting "model, choose "tool" and press "menu" to confirm going to the "Alarm Set".

How to use Line-in function:

1. Connect to your MP3/MP4/PC, etc by 3.5 to 3.5 mm audio cable. The audio files stored in MP3/MP4/PC plays via the speaker automatically.
2. While using the audio input function, all the operation are invalid but only on external devices such as "mp3/mp4/pc".

Other setting:

1. EQ: Under playing mode, short press "MENU" button, choose "EQ seting" and short press "menu" button to confirm. Then Choose the EQ and short press "MENU" button to confirm. 7 kinds of EQ are optional: Natural, Rock, Pop, Classic, Soft, Jazz, DBB.
2. Playing mode: in playing state, short press "MENU" button, choose "playing model" and short press "menu" button to confirm. Choose repeat mode you like and short press "MENU" button to confirm again.7 kinds of mode are optional: Normal, Repeat one, Folder, Repeat folder, Repeat all, Random, Intro.
3. Folder display: Under playing mode, press "Play/pause" button to stop the music. Then short press "MENU" button, switch "U-disk DIR" or "SD DIR" to display the folders stored in the USB or SD card. Then choose the song and confirm by short press "MENU".
4. Language: Under playing mode, long press "Menu" to return to main menu, Choose "SETTING" and press menu to confirm. Then choose "Language" and short press "MENU" button to enter into

submenu. Choose proper language you like.

Remarks :

1. Under the "MUSIC" model, Line-in function is prior to SD/USB Card.
2. At any submenu, long press "MENU" button to return to main interface.
3. The music plays in the order of "last is first", while memory devices are always in their place, last music will resume as the first after a break.
4. While using the audio input function, all the operations are invalid except adjusting volume. Other operations have to be done on external devices such as "Mp3/Mp4/PC".
5. Please turn the power button to "OFF" to cut off power supply while without using.

How to charge:

1. Connect to PC or other device by USB cable for charging.
2. Normal Charging time: 3—8 hours. (First time must be fully charged by 8 hours but please don't exceed 8 hours normally).

Features can be change without notice.

Import by:
I.R.P., S.L.
Avda. Santa Clara de Cuba 5
Sevilla, Spain.



DECLARATION OF CONFORMITY

I.R.P., SL declare under our responsibility that the equipment meets the requirements indicated in the following directives:

EMC DIRECTIVES

EN55013: 2001 + A1: 2003 + A2: 2006
EN61000-3-2: 2006 + A1: 2009 + A2: 2009
EN61000-3-3: 2008
EN55020: 2007

Description of apparatus:

BRIGMTON Model **BAMP-601**
Radio with built-in speaker

Importer: I.R.P., SL
Address: Avenida Santa Clara de Cuba 5, 41007, Sevilla.